



**SET PRICES**

Prices in the Shopper can be set by Level, Tray, Selection, or All (entire machine).

1. To set the price by **Level**, press . The display will briefly show *LEVEL Z.X* (where X is the current zone). Enter a price using the maintenance keypad. The display will show: *LEVEL 100*. Rotate the drum so the level you wish to set prices for is in the vend position and slide its vend door. A beep will sound and the price display will show *100* and all the selections on that level will be priced for \$1.00.
  
2. To set the price by **Tray**, press and then until the display shows *TRAY Z.X* (where X is the current zone). Enter a price using the maintenance keypad. The display will show: *TRAY 100*. Rotate the drum so the tray you wish to set a price for is in the vend position and slide the vend door. A beep will sound and the price display will show *100*. All products in that tray will be priced for \$1.00. Slide the vend door of a different tray to set it to \$1.00 as well.
  
3. To set the price by **Selection**, press and until the display shows *EACH Z.X* (where X is the current zone). Enter a price using the maintenance keypad. The display will show: *EACH 100*. Rotate the drum so the compartment you wish to set a price for is in the vend position and slide the vend door. A beep will sound and the price display will show *100*. The product in that compartment will be priced at \$1.00. Slide the vend doors of additional compartments to set their price to \$1.00 (make sure they are in the vend position first).
  
4. To set **All** selections in the machine to the same price, press and until the display shows *ALL Z.X* (where X is the current zone). Enter a price using the maintenance keypad. The display will show: *ALL 100*. Slide any vend door that is in the vend position. A beep will sound and the price displays will show *100*. All selections in the machine will be priced at \$1.00.

**IMPORTANT NOTE:**

You can combine the pricing options above to efficiently set prices in the machine to your preference. In the example below, the route driver wants to set the prices for all products in the bottom six levels at 1.00. The products in the top three levels will be priced at \$2.00, except for tray one on level 2, and the first compartment in tray 1 on level 3, priced at \$2.50.

- a. First, press and until the display shows *ALL Z.X*. Enter 1.00 and slide a vend door. All products in the machine are now priced at \$1.00.
  
- b. Press until the display shows *LEVEL Z.X*. Enter 2.00 and slide the vend doors of levels 1-3. These levels are now priced at \$2.00, the bottom six at \$1.00.