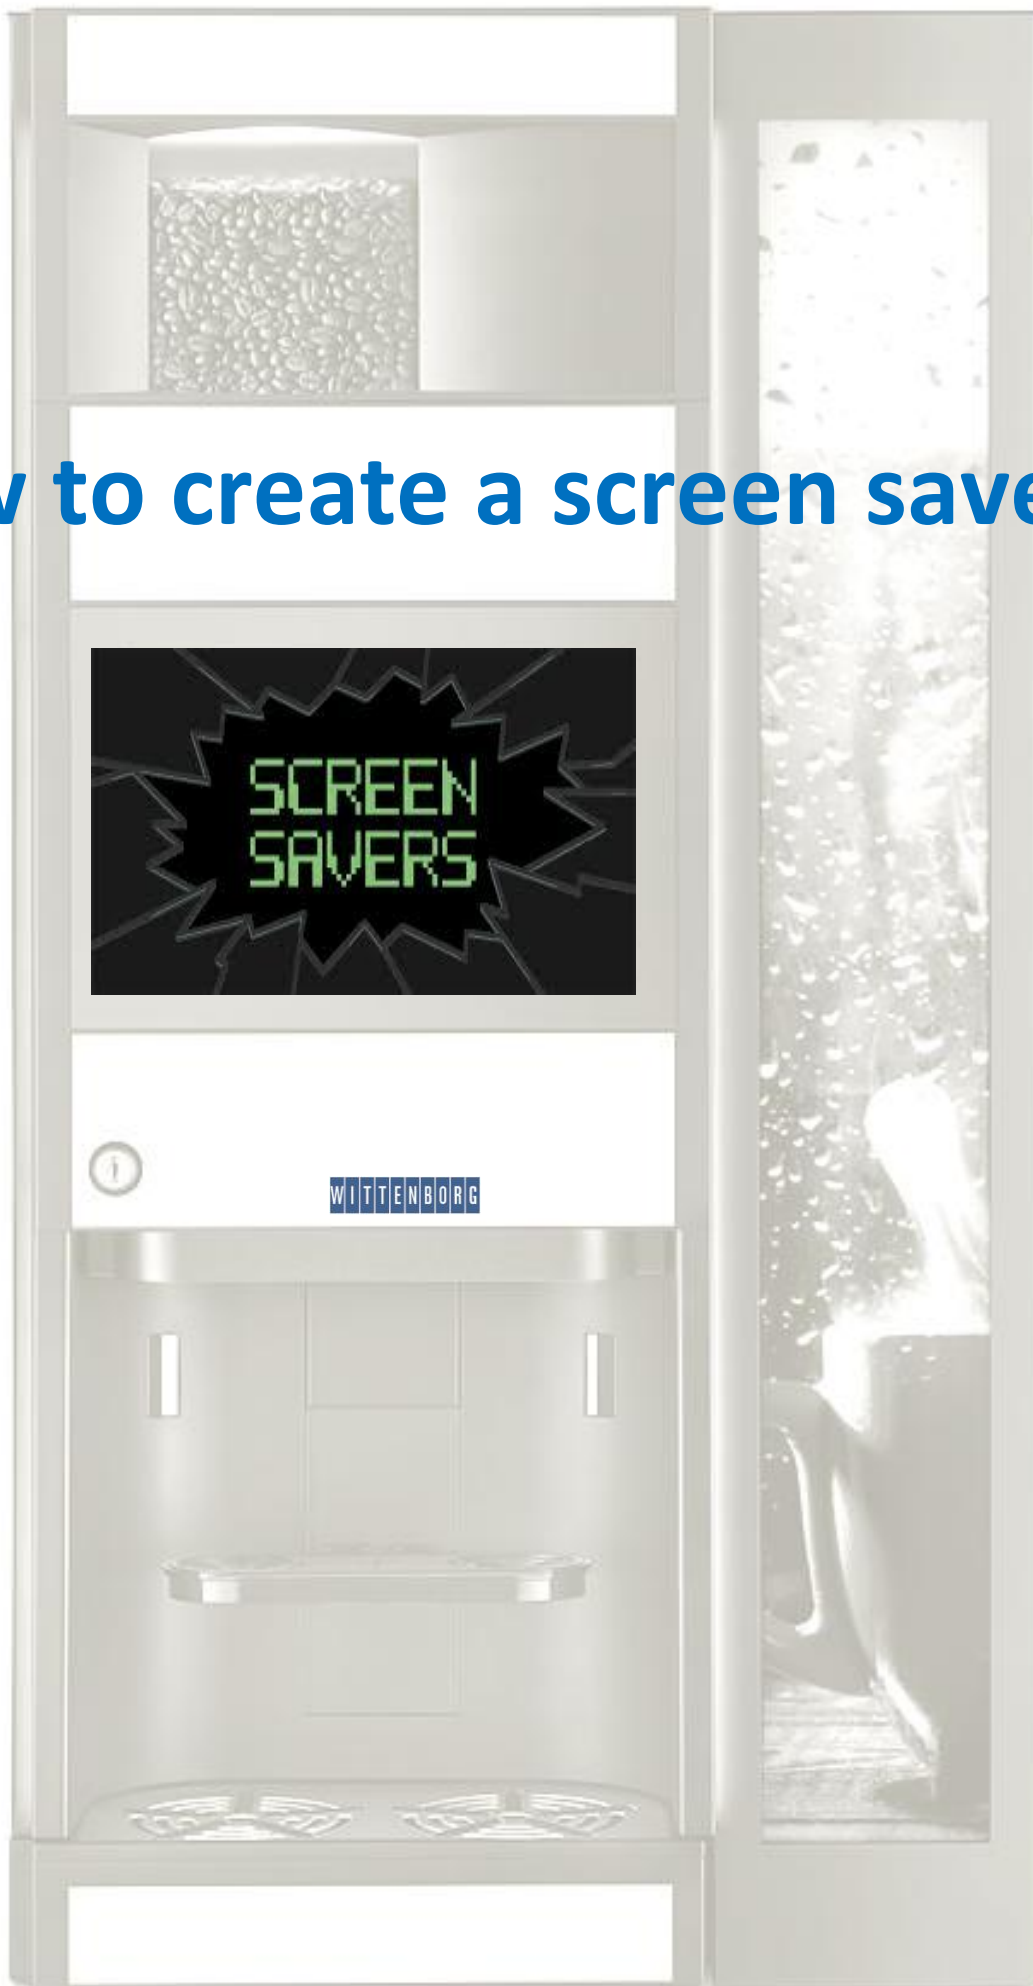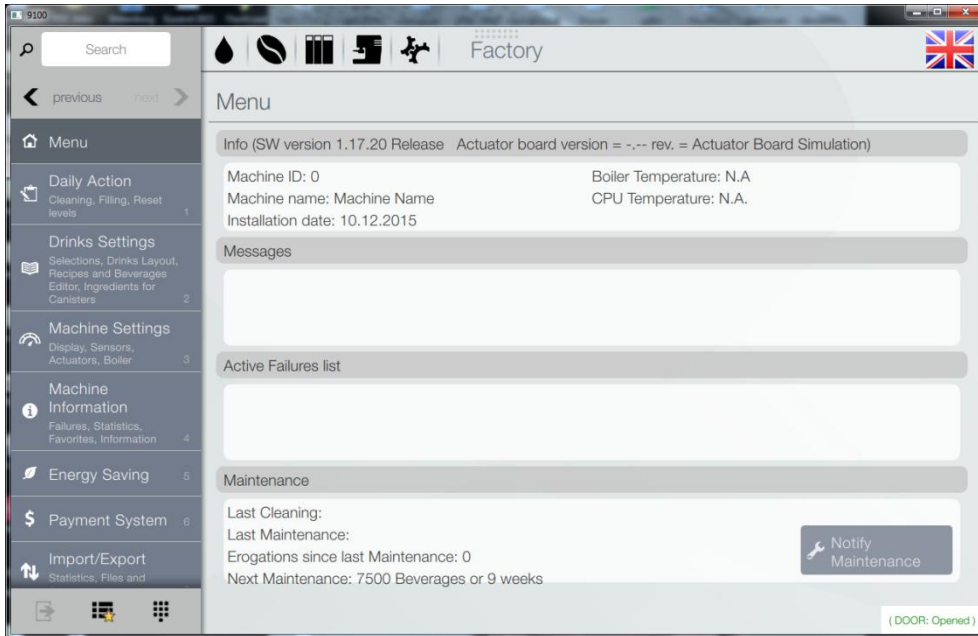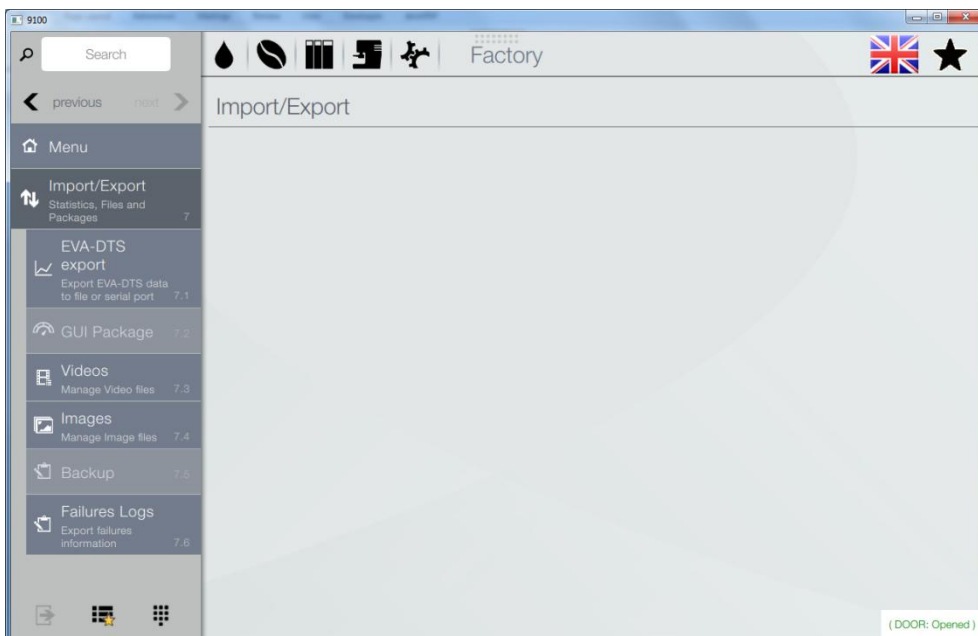# How to create a screen saver ?

This step by step guide aims to make you able to create a screen saver on a Wittenborg 9100 machine. In this example we create a screen saver containing two pictures and two videos playing in a loop.
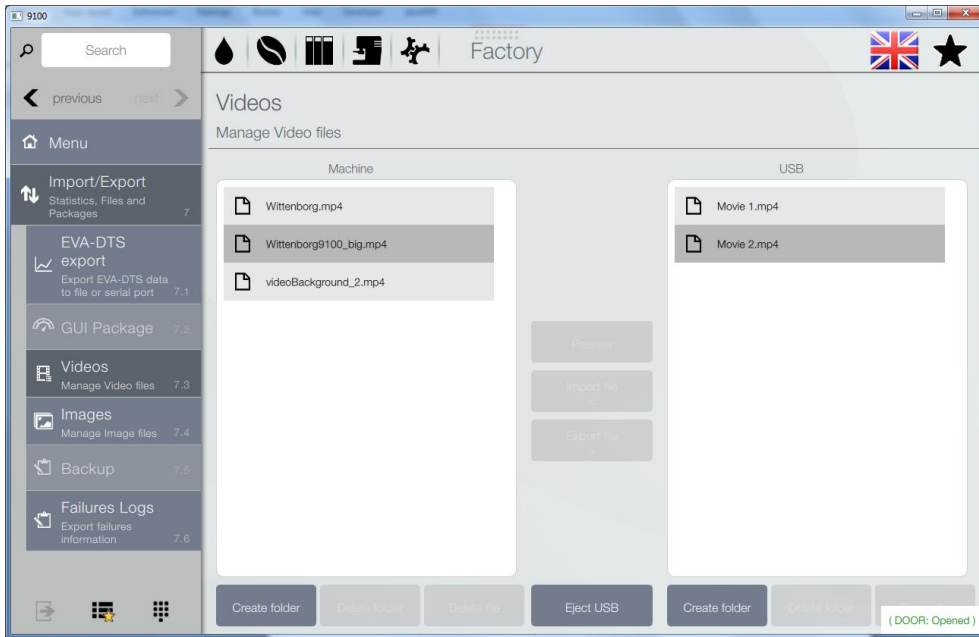Here below the example:

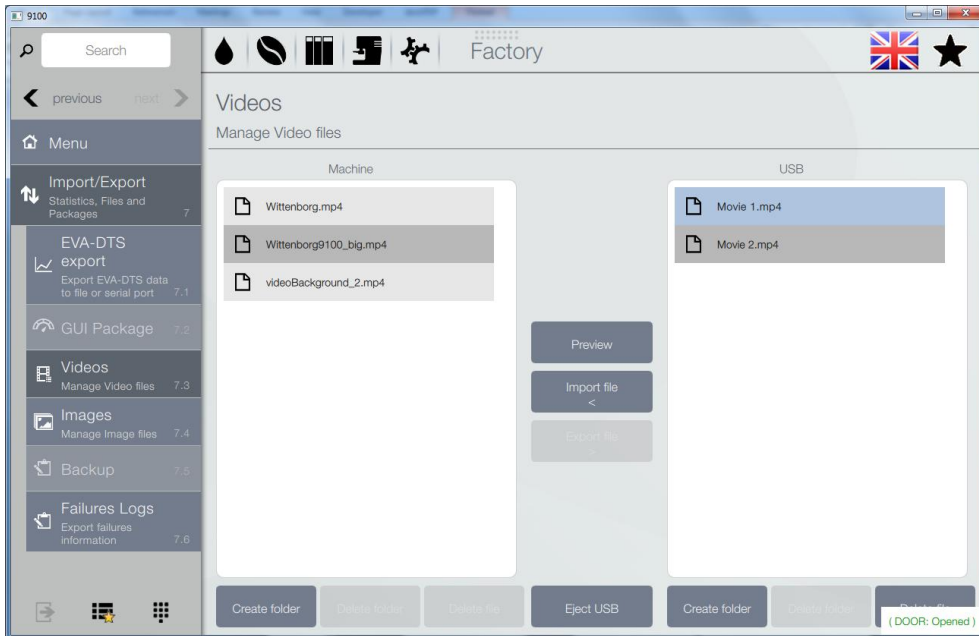From the start screen go to the **IMPORT/EXPORT MENU**
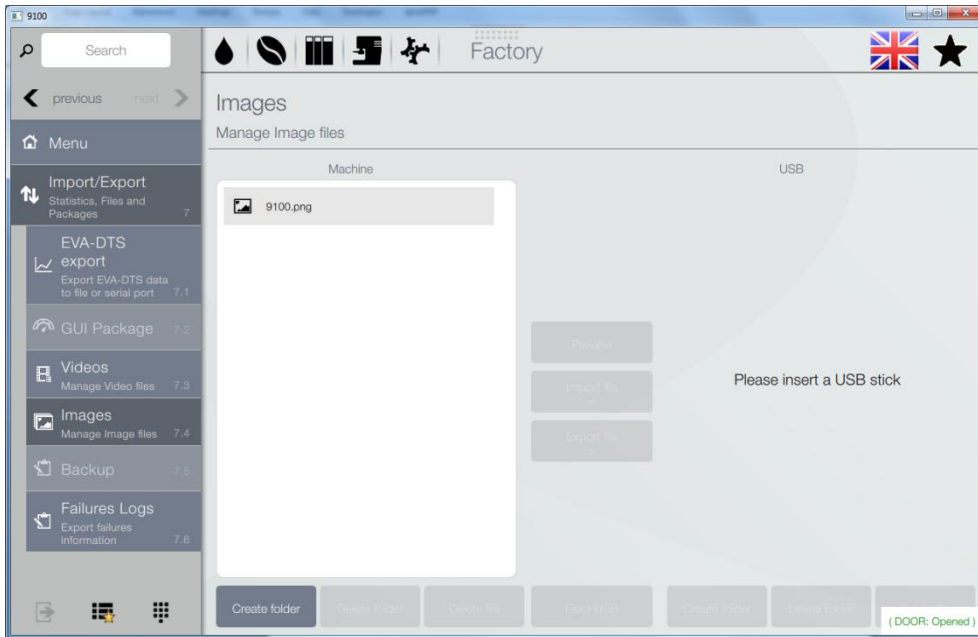

Go To **VIDEOS**

Insert an USB containing your video files.
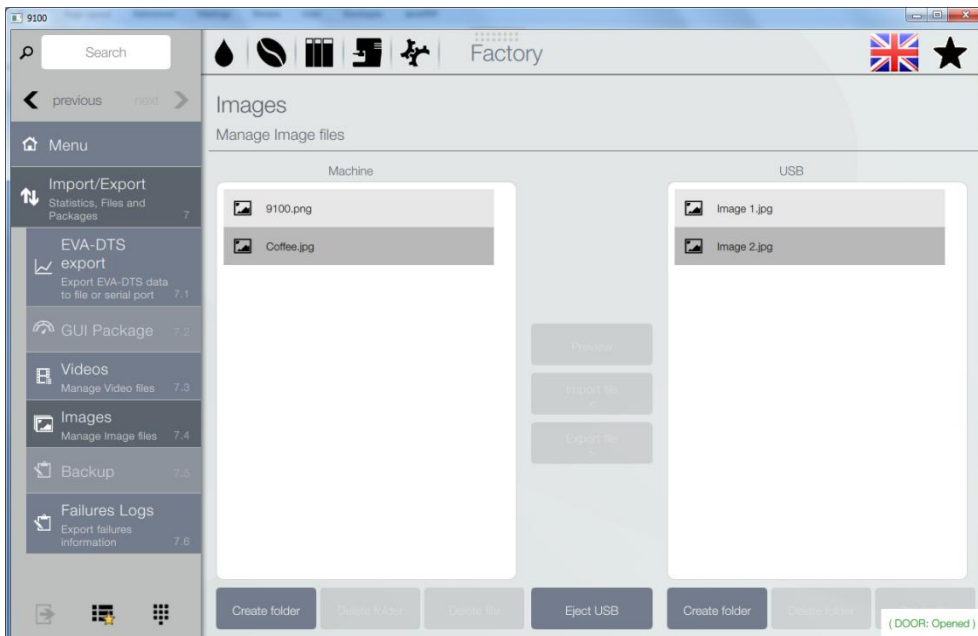*The format must be .mp4, .avi or .mov format.*

1. Click on the filename *Movie 1.mp4* and IMPORT FILE
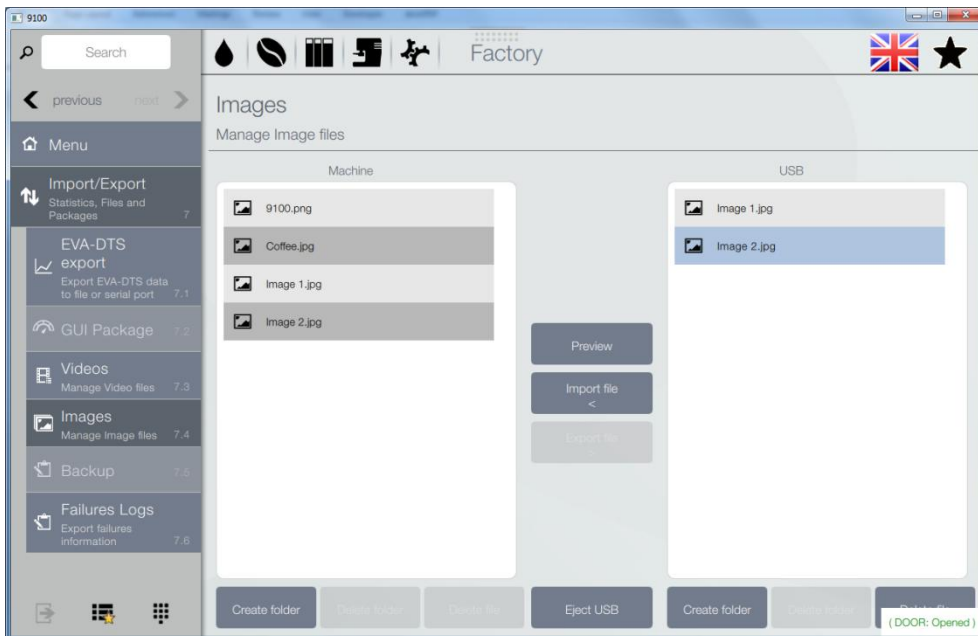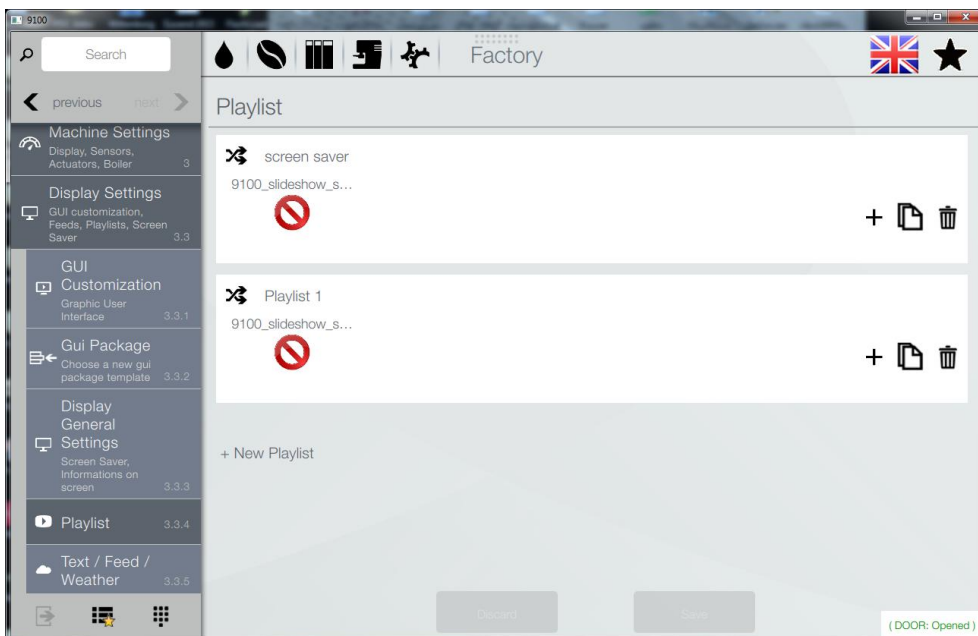2. Click on the filename *Movie 2.mp4* and IMPORT FILE

Go to **IMAGES**

Insert an USB containing your image files.

1. Click on the filename *Image 1.jpg* and IMPORT FILE
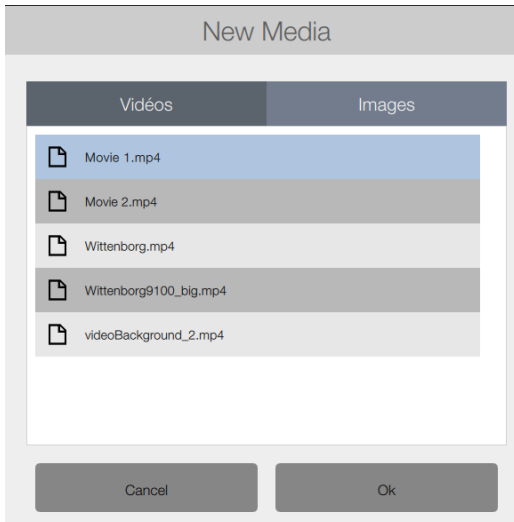2. Click on the filename *Image 2.jpg* and IMPORT FILE

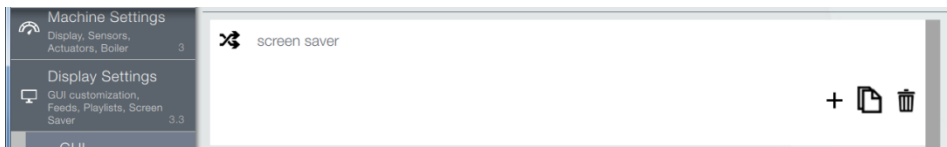Go to **MACHINE SETTINGS/DISPLAY SETTINGS/PLAYLIST** and click **SCREEN SAVER**

Click on the **+** sign in the window with the filename **SCREEN SAVER**
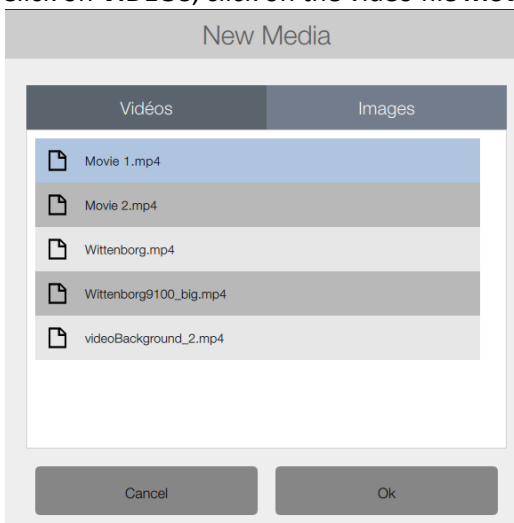

Click on **VIDEOS**, click on the video file *Movie 1.mp4* and then **OK**

Click on the **+** sign in the window with the filename **SCREEN SAVER**

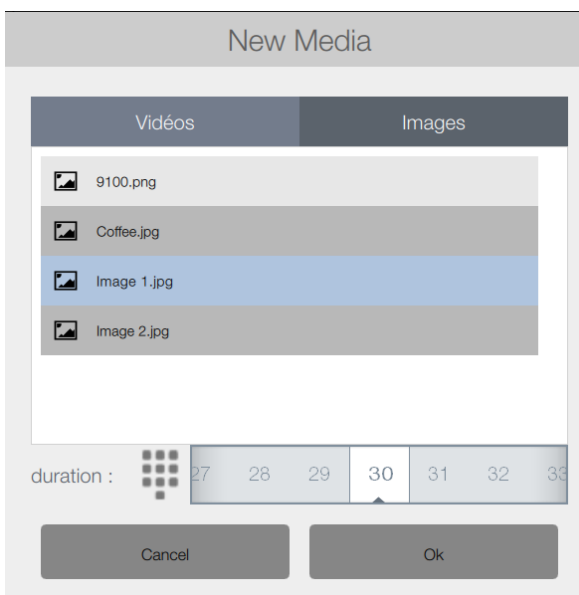Click on **VIDEOS**, click on the video file *Movie 2.mp4* and then **OK**

Click on the **+** sign in the window with the filename **SCREEN SAVER**

Click on **IMAGES** and click on the image file *Image 1.jpg*
Set the **duration** to 30 and then click **OK**
The duration is the time, in seconds, the picture is displayed during screen saving mode

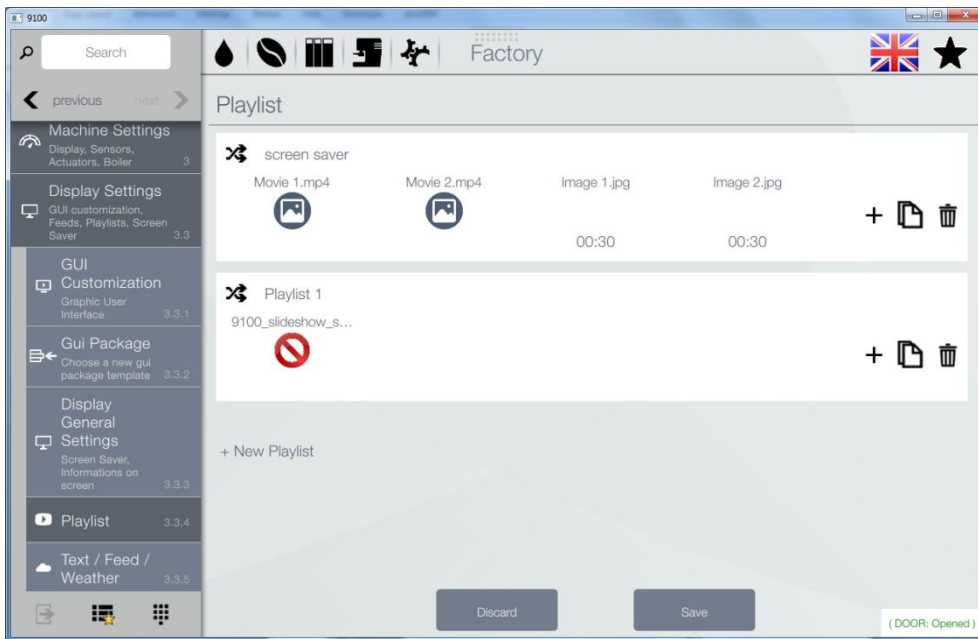Click on the **+** sign in the window with the filename **SCREEN SAVER**

Click on **IMAGES** and click on the image file *Image 2.jpg*
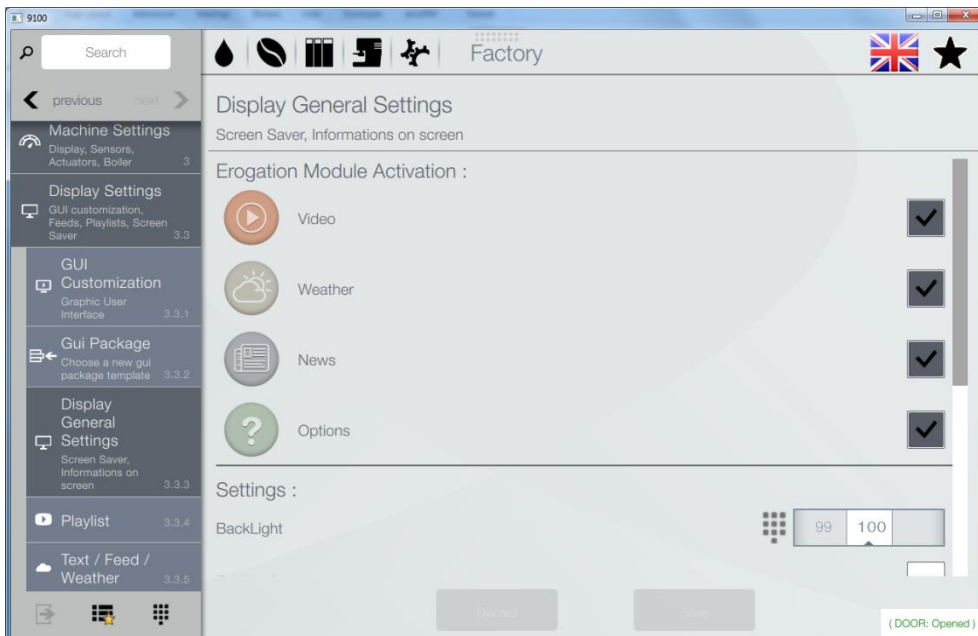Set the **duration** to 30 and then click **OK**
The duration is the time, in seconds, the picture is displayed during screen saving mode

Click **SAVE**

Go to **DISPLAY GENERAL SETTINGS**

Scroll down and
1. **Enable** the **SCREEN SAVER**
2. Set the **SCREEN SAVER DELAY** in minutes
3. Select the **PLAYLIST** you want to use for the screen saver
4. Click **SAVE**